

HAND-HELD VHF RADIO INFORMATION

The number of squares displayed under the channel designation indicate battery strength. Full charge is 6 squares

1. If you hear a steady tone when you key to transmit, you are being warned **your transmission probably will not be heard** because of a low battery. This may be caused because the 1/5w (1 or 5 watt power to transmit) button was inadvertently pressed. A fully charged battery is required to transmit with 5 watts of power.
2. If any very small text appears in the display area, it means a button has been pressed that should not have..... So clear the screen by pressing one of the following buttons again to clear this:
 - MEM clears flashing *SCAN*
 - 1/5w clears steady *5w*
 - INT clears steady *INT*
 - 16/9 clears the 09 *SCAN* or 16 *TRI*
 - WX selects weather channels; channel 2 is recommended
 - TRI clears *TRI*

When the button above the transmission key is pressed and held for 3 seconds, the channel selected is locked in place for as long as the power is on.